SHARP

MIKRO KOMPONENTEN SYSTEM
MICRO-CHAÎNE
SISTEMA MICRO
MIKRO KOMPONENT SYSTEM
MICRO SISTEMI
MICRO SYSTEEM
MICRO COMPONENT SYSTEM

MODELL MODELLO
MODÈLE MODEL
MODELO MODEL
MODELL

XL-40H
XL-50H

BEDIENUNGSANLEITUNG
MODE D'EMPLOI
MANUAL DE MANEJO
BRUKSANVISNING

MANUALE DI ISTRUZIONI
GEBRUIKSAANWIJZING
OPERATION MANUAL

Mikro Komponenten System XL-40H/XL-50H besteht aus XL-40H/XL-50H (Hauptgerät) und CP-XL40H/CP- XL50H (Lautsprechersystem).

Micro-chaîne XL-40H/XL-50H composée de XL-40H/XL-50H (appareil principal) et CP-XL40H/CP-XL50H (enceinte acoustique).

Sistema micro con XL-40H/XL-50H que consta de XL-40H/XL-50H (aparato principal) y CP-XL40H/CP-XL50H (sistema de altavoz).

XL-40H/XL-50H mikro komponent system bestående av XL-40H/XL-50H (huvudenhet) och CP-XL40H/CP-XL50H (högtalarsystem).

Micro sistemi XL-40H/XL-50H composto da XL-40H/XL-50H (apparecchio principale) e CP-XL40H/CP-XL50H (sistema di diffusori).

XL-40H/XL-50H micro systeem bestaande uit XL-40H/XL-50H (hoofdtoestel) en CP-XL40H/CP-XL50H (luidsprekersysteem).

XL-40H/XL-50H Micro Component System consisting of XL-40H/XL-50H (main unit) and CP-XL40H/CP-XL50H (speaker system).

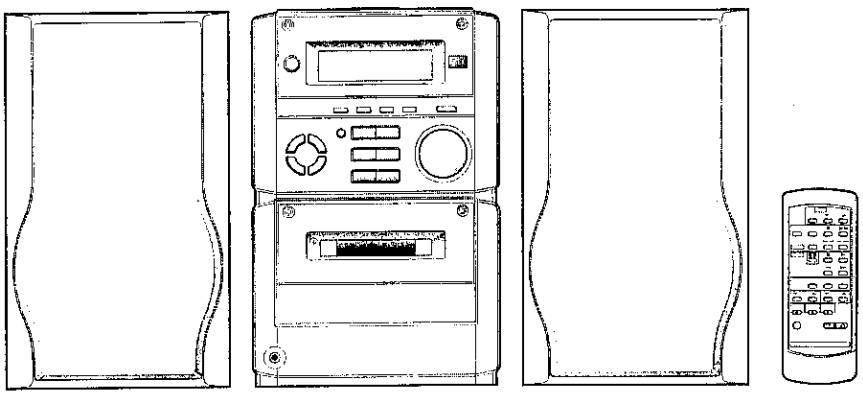

COMPACT disc DIGITAL AUDIO

R·D·S EON

SAVING ENERGY STAND-BY POWER CONSUMPTION 0.6W

DEUTSCH
FRANÇAIS
ESPAÑOL
SVENSKA
ITALIANO
NEDERLANDS
ENGLISH

BESONDERE ANMERKUNGEN
REMARQUES SPÉCIALES
NOTAS ESPECIALES
SÄRSKILDA ANMÄRKNINGAR
NOTE PARTICOLARI
BIJZONDERE OPMERKINGEN
SPECIAL NOTES

- Dieses Gerät entspricht den Anforderungen der EG-Richtlinien 89/336/EWG und 73/23/EWG mit Änderung 93/68/EWG.
- Ce matériel répond aux exigences contenues dans les directives 89/336/CEE et 73/23/CEE modifiées par la directive 93/68/CEE.
- Este aparato satisface las exigencias de las Directivas 89/ 336/CEE y 73/23/CEE, modifi cadas por medio de la 93/68/CEE.
- Denna utrustning uppfyller kraven enligt riktlinjerna 89/336/EEC och 73/23/EEC så som kompletteras av 93/68/EEC.
- Quest' apparecchio è conforme ai requisiti delle direttive 89/336/EEC e 73/23/EEC, come emendata dalla direttiva 93/68/EEC.
- **Dichiarazione di conformità**
  La società SHARP ELECTRONICS EUROPE GmbH dichiara che il prodotto SHARP MICRO SISTEMI è costruito in conformità alle prescrizioni del D.M.n°548 del 28/8/95, pubblicato sulla G.U.n°301 del 28/12/95 ed in particolare è conforme a quanto indicato nell'art. 2, comma 1 dello stesso decreto.
- Dit apparaat voldoet aan de eisen van de richtlijnen 89/336/EEG en 73/23/EEG, gewijzigd door 93/68/EEG.
- This equipment complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.

- Dette udstyr overholder kravene i direktiv nr. 89/336/EEC og 73/23/EEC med tillaeg nr. 93/68/EEC.
- Este equipamento obedece às exigências das directivas 89/336/CEE e 73/23/CEE, na sua versão corrigida pela directiva 93/68/CEE.
- Dette produktet oppfyller betingelsene i direktivene 89/336/EEC og 73/23/EEC i endringen 93/68/EEC.
- Tämä laite täyttää direktiivien 89/336/EEC ja 73/23/EEC vaatimukset, joita on muutettu direktiivillä 93/68/EEC.
- Η εγκατάσταση αυτή ανταποκρίνεται στις απαιτήσεις των οδηγιών της Ευρωπαϊκής Ενωσης 89/336/ΕΟΚ και 73/23/ΕΟΚ, όπως οι κανονισμοί αυτοί συμπληρώθηκαν από την οδηγία 93/68/ΕΟΚ.

- Audio-visuelles Material kann Urheberrechte umfassen, die ohne Genehmigung des Eigentümers dieser Urheberrechte nicht aufgenommen werden dürfen. Siehe die entsprechenden nationalen Gesetze.
- Le matériel audio-visuel peut comporter des oeuvres faisant l'objet de droits d'auteur qui ne peuvent être enregistrées sans l'autorisation du possesseur du droit d'auteur, veuillez vous référer aux réglementations nationales en vigueur.
- El material audiovisual puede consistir en trabajos que tengan derechos de autor y que no deben grabarse sin la autorización del poseedor de dichos derechos de autor. Sírvase consultar las leyes aplicables en su país.
- Audiovisuellt material kan innehålla upphovsrättsarbete som inte skall mångfaldigas utan tillstånd av copyrightinnehavaren. Se den tillämpliga lagen i ditt land.
- Il materiale audio-visivo che fosse soggetto a copyright non può essere registrato senza l'autorizzazione del possessore del copyright. Si prega di attenersi alle leggi in vigore sul territorio nazionale.
- Audio- visueel materiaal kan wor den bescher md door auteursrechten, in welk geval het niet mag worden opgenomen zonder de toestemming van de auteursrechthouder. Zie voor nadere informatie de betreffende wetten in het land van gebruik.
- Audio-visual material may consist of copyrighted works which must not be recorded without the authority of the owner of the copyright. Please refer to relevant law in your country.

- Bei Einstellung der ON/STAND-BY-Taste auf STAND-BY ist die Netzspannung immer noch im Gerät vorhanden.
  Wenn die ON/STAND-BY-Taste auf STAND-BY eingestellt wird, kann das Gerät unter Verwendung der Timer-Betriebsart oder Fernbedienung in Betrieb gesetzt werden.

Warnung:
In diesem Gerät sind keine vom Benutzer wartbaren Teile vorhanden. Niemals Abdeckungen entfernen, außer wenn Sie dafür qualifiziert sind. In diesem Gerät sind gefährliche Spannungen vorhanden. Vor Ausführung von irgendwelchen Kundendienstarbeiten oder bei längerer Nichtverwendung des Gerätes stets den Netzstecker aus der Netzsteckdose ziehen.

- Lorsque la touche ON/STAND-BY est mise en STAND-BY, l'appareil est toujours sous tension.
  Lorsque la touche ON/STAND-BY se trouve sur la position STAND-BY, l'appareil est prêt à fonctionner par la minuterie ou la télécommande.

Avertissement:
Cet appareil contient des pièces non réparables par l'utilisateur. Per sonne non qualifiée n'enlèvera jamais les couvercles.L'appareil contenant des organes portés à haute tension, débrancher l'appareil avant toute réparation ou en période de non-utilisation.

- Cuando el botón ON/STAND-BY está puesto en la posición STAND-BY, todavía hay tensión dentro del aparato.
  Cuando el botón ON/STAND-BY está puesto en la posición STAND-BY, el aparato puede ponerse en funcionamiento utilizando el modo del temporizador o el controlador remoto.

Advertencia:
Tenga en cuenta que dentro de este aparato no hay piezas que pueda reparar. No quite nunca las tapas a menos que se esté cualificado para hacerlo. Este aparato tiene en su interior tensiones peligrosas. Desenchufe siempre la clavija de la red del tomacorriente antes de realizar cualquier servicio de mantenimiento y cuando no se use el aparato durante un largo período de tiempo.

- När ON/STAND-BY knappen är i läge STAND-BY, finns nätspänning i apparaten.
  Med ON/STAND-BY knappen i läge STAND-BY, kan apparaten start as med timerfunktion ell er fjärrkontrollen.

Varning:
Apparaten innehåller inga delar som kan åtgärdas av kunden. Höljet får endast öppnas av kvalificerad personal. Apparaten innehåller farliga spänningar. Stickkontakten ska därför dras ut från nätuttaget före reparationsarbeten och bör dras ut om apparaten inte ska användas på mycket länge.

PŘED SEJMUTÍM KRYTU NUTNO VYJMOUT VIDLICI ZE SÍŤOVÉ ZÁSUVKY.

PRED ZLOŽENÍM KRYTU JE NUTNÉ ODPOJIŤ PRÍSTROJ ZO SIETE.

- Quando il tasto ON/STAND-BY si trova in posizione STAND-BY, all'interno dell'apparecchio c'è ancora la corrente.
  Se il tasto ON/STAND-BY si trova nella posizione STAND-BY, l'unità può venire accesa con il modo timer o con il telecomando.

Avvertenza:
L'apparecchio non contiene parti riparabili dall'utente. Non togliere mai i coperchi, a meno di non essere qualificati per farlo. All'interno dell'apparecchio ci sono tensioni pericolose, per cui si deve sempre staccare la spina del cavo d'alimentazione dalla presa di corrente prima di qualsiasi int ervento di manutenzione e quando non si usa l'apparecchio per un lungo periodo di tempo.

- Wanneer de ON/STAND-BY toets in de STAND-BY stand staat, loopt er nog steeds stroom (netspanning) in het toestel.
  Wanneer de ON/STAND-BY toets in de STAND-BY stand staat, kan het toestel ingeschakeld worden via de timerfunctie of de afstandsbediening.

Waarschuwing:
Dit toestel bevat geen door de gebruiker te repareren onderdelen. Verwijder de behuizing nooit tenzij u deskundig bent op dit gebied. In het toestel loopt een gevaarlijke spanning; haal de stekker altijd uit het stopcontact alvorens onderhoud uit te voeren of wanneer het toestel voor langere tijd niet gebruikt wordt.

- When the ON/STAND-BY button is set at STAND-BY position, mains voltage is still present inside the unit.
  When the ON/STAND-BY button is set at STAND-BY position, the unit may be brought into operation by the timer mode or remote control.

Warning:
This unit contains no user serviceable parts. Never remove covers unless qualified to do so. This unit contains dangerous voltages, always remove mains plug from the socket before any service operation and when not in use for a long period.

- Når ON/STAND-BY-knappen er sat i STAND-BY positionen, er der stadig netspaending til stede i apparatet.
  Når ON/STAND-BY-knappen er sat i STAND-BY-position, kan apparatet startes v.hj.a. timerfunksionen eller fjernbetjeningen.

Advarsel:
Apparatet indeholder ingen dele, der kan repareres af brugeren selv. Fjern aldrig kabinettet med mindre De er kvalificeret hertil. Apparatet indeholder farlig strømspaending. Træk altid stikket ud af stikkontakten før der foretages reparationer, eller hvis apparatet ikke er i brug i længere tid.

DENNA APPARAT ÄR ANSLUTEN TILL 230 V VÄXELSTRÖM NÄR STICKPROPPEN ÄR INSKJUTEN I VÄGGUTTAGET. FÖR ATT FULLSTÄNDIGT KOPPLA IFRÅN APPARATEN, V.G. DRAG UT STICKPROPPEN.

Eigenschaften der Laserdiode
- Material: GaAlAs
- Wellenlänge: 780 nm
- Emissionsdauer: kontinuierlich
- Laser-Ausgang: max. 0,6 mW

Caractéristiques de la diode laser
- Matériel: GaAlAs
- Longueur d'onde: 780 nm
- Durée d'émission: ininterrompue
- Puissance de sortie laser maximale: 0,6 mW

Características del diodo láser
- Material: GaAlAs
- Longitud de onda: 780 nm
- Duración de emisión : continua
- Salida de láser: máx. 0,6 mW

Laserdiodens egenskaper
- Material: GaAlAs
- Våglängd: 780 nm
- Utstrålningsvaraktighet: kontinuerlig
- Lasereffekt: max. 0,6 mW

Proprietà del diodo laser
- Materiale: GaAlAs
- Lunghezza d'onda: 780 nm
- Durata di emissione: continua
- Uscita massima del laser: 0,6 mW

Laser diode specifikaties
- Materiaal: GaAlAs
- Golflengte: 780 nm
- Stralingsduur: doorlopend
- Laseruitgang: max. 0,6 mW

Laser Diode Properties
- Material: GaAlAs
- Wavelength: 780 nm
- Emission Duration: continuous
- Laser Output: max. 0.6 mW

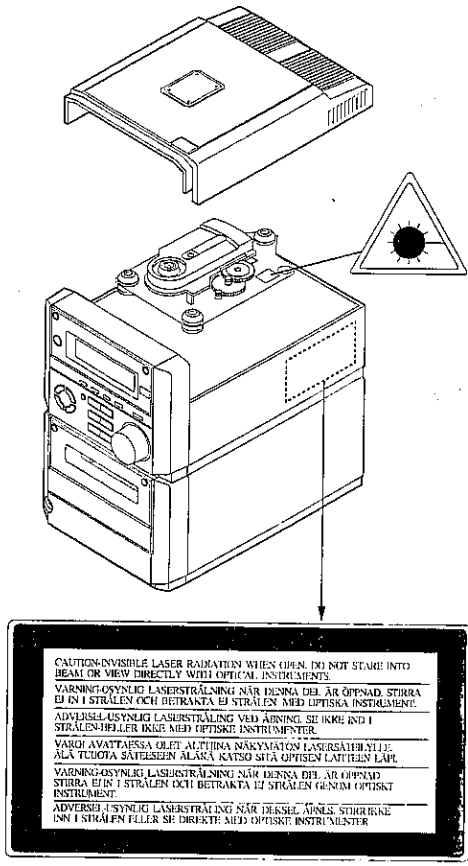
CAUTION-INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.
VARNING-OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. STIRRA EJ IN I STRÅLEN OCH BETRAKTA EJ STRÅLEN MED OPTISKA INSTRUMENT.
ADVARSEL-USYNLIG LASERSTRÅLING VED ÅBNING. SE IKKE IND I STRÅLEN-HELLER IKKE MED OPTISKE INSTRUMENTER.
VAROI AVATTAESSA OLET ALTTIINA NÄKYMÄTÖN LASERSÄTEILYLLE. ÄLÄ TUOTA SÄTEISEEN ÄLÄKÄ KATSO SITÄ OPTISEN LAITTEEN LÄPI.
VARNING-OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD STIRRA EJ IN I STRÅLEN OCH BETRAKTA EJ STRÅLEN GENOM OPTISKT INSTRUMENT.
ADVERSEL-USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES. STIRR IKKE INN I STRÅLEN ELLER SE DIREKTE MED OPTISKE INSTRUMENTER

VAROITUS! LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAI NI TULLA TAVALLA SAATTAA ALTI STAA KÄYTTÄJÄN TURVALLI SUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

VARNING - OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVI SNI NG SPECI FI CERAS. KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING, SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.

ENGLISH

Thank you for purchasing this SHARP product.
To obtain the best performance from this product please read this manual carefully.
It will guide you in operating your SHARP product.

CONTENTS

	Page
ACCESSORIES	1
PRECAUTIONS	1-2
NAMES OF CONTROLS AND INDICATORS	3-4
PREPARATION FOR USE	5-6
SETTING THE CLOCK	7
SOUND CONTROL	8
COMPACT DISC OPERATION	9-11
CASSETTE OPERATION	12
RADIO OPERATION	13-14
RDS (Radio Data System) OPERATION	15-22
RECORDING	23
HOW TO USE THE BUILT-IN TIMER	24-25
HEADPHONES	26
RESETTING THE MICROCOMPUTER	26
MAINTENANCE	26
SPECIFICATIONS	27

ACCESSORIES

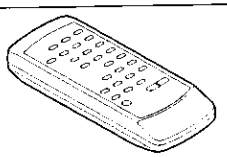

● Remote control × 1



● "AA" size battery × 2 (UM/SUM-3, R6, HP-7 or similar)

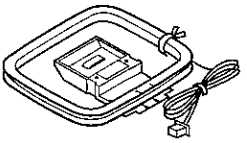

● AM loop aerial ×1

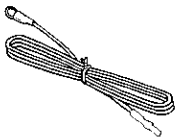

● FM aerial × 1

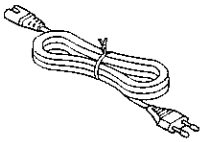

● AC power lead × 1

Note:
Parts and equipment mentioned in this operation manual other than those in the drawing are not included.

PRECAUTIONS

■ General

- Please ensure that the equipment is positioned in a well ventilated area and ensure that there is at least 10cm (4") of free space along the sides and back. There must also be a minimum of 20cm (8") of free space on the top of the unit.
- Do not use oil, solvents, petrol, paint thinners or insecticides on the unit.
- Do not expose the unit to moisture, to temperatures higher than 60°C (140°F) or to extreme low temperatures.
- Keep the unit away from direct sunlight, strong magnetic fields, excessive dust, humidity and electronic/electrical equipment (home computers, facsimiles, etc.) which generate electrical noise.
- Hold the AC power plug by the head when removing it from the AC socket, as pulling the lead can damage internal wires.
- When cleaning the heads, pinch roller, etc., remove the AC power plug from the wall socket as the unit contains high voltages.
  Do not remove the outer cover, as this may result in electric shock. Refer internal service to your local SHARP service facility.
- Use the unit on a firm, level surface free from vibration, and do not place anything on the top of the unit.
- If an electrical storm is taking place near you, it is suggested that you disconnect the AC power lead from the AC socket for safety.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- No naked items sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The apparatus is designed for use in moderate climate.

■ Volume control

The sound level at a given volume setting depends on a combination of speaker efficiency, location and various other factors.
It is advisable to avoid exposure to high volume levels, which occur whilst turning the unit on with the volume control setting up high, or whilst continually listening at high volumes.

■ Condensation

Sudden temperature changes, storage or operation in an extremely humid environment may cause condensation inside the cabinet (CD pickup, tape heads, etc.) or on the transmitter LED on the remote control.
Condensation can cause the unit to malfunction. If this happens, leave the power on with no disc (or cassette) in the unit until normal playback is possible (about 1 hour). Wipe off any condensation on the transmitter LED with a soft cloth before operating the unit.

Warning:

CD players use a laser pickup which can damage the eyes if viewed directly. Do not look at the pickup, and do not touch the pickup directly.

■ Care of compact discs

Compact discs are fairly resistant to damage, however mistracking can occur due to the accumulation of dirt on the disc surface.
Follow the guidelines below for maximum enjoyment from your CD collection and player.

- Do not write on either side of the disc, particularly the non-label side. Signals are read from the non-label side. Do not mark this surface.
- Keep your discs away from direct sunlight, heat, and excessive moisture.
- Always hold the CDs by the edges. Fingerprints, dirt, or water on the CDs can cause noise or mistracking. If a CD is dirty or does not play properly, clean it with a soft, dry cloth, wiping straight out from the centre, along the radius.

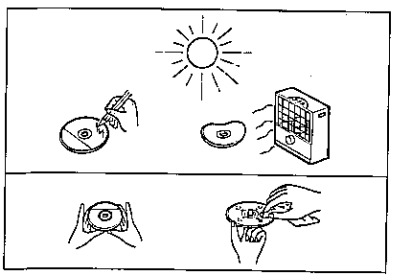

NO

YES
Correct

■ Cassette tape

- For playback, use normal or low-noise tape for the best sound. (Metal or CrO_2 tape is not recommended.)
  For recording, use only normal tape.
- Do not use C-120 tapes, tapes with large diameter reels, or poor-quality tapes, as they may cause malfunctions.
- Before loading a tape into the cassette compartment, tighten the slack with a pen or pencil.
- Cassettes have removable tabs which prevent accidental recording or erasing from taking place. Removing the tab will protect the corresponding side from being erased. Cover the tab holes with adhesive tape to erase or record again.

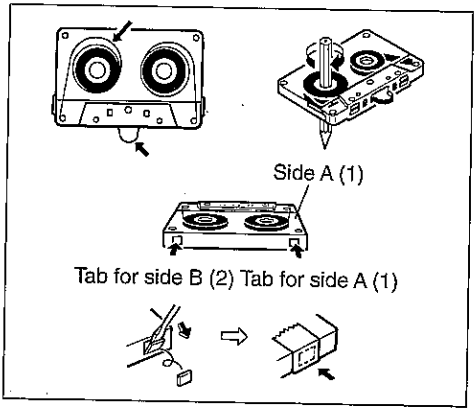

Warning:

The voltage used must be the same as that specified on this unit. Using this product with a higher voltage than that which is specified is dangerous and may result in a fire or other type of accident causing damage.
SHARP will not be held responsible for any damage resulting from use of this unit with a voltage other than that which is specified.

NAMES OF CONTROLS AND INDICATORS

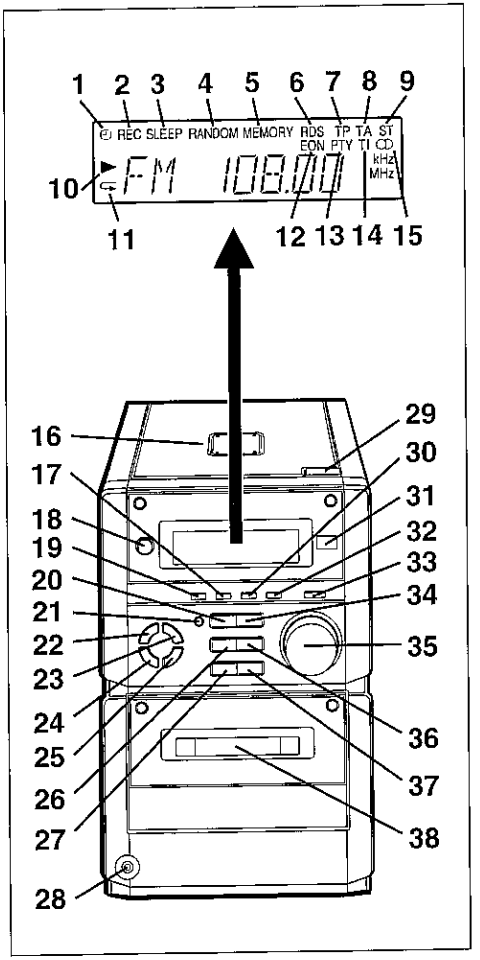

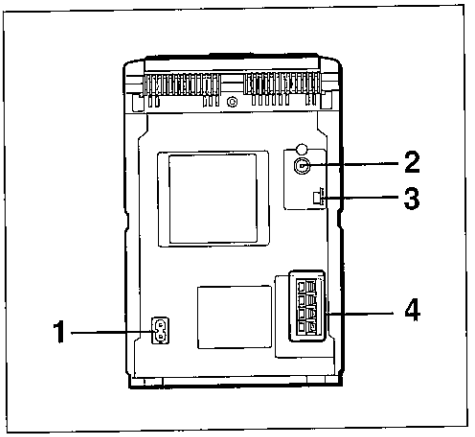

■ Front panel

1. Timer Indicator
2. Record Indicator
3. Sleep Indicator
4. (CD) Random Indicator
5. (CD/TUNER) Memory Indicator
6. RDS Indicator
7. Traffic Programme Indicator
8. Traffic Announcement Indicator
9. FM Stereo Mode Indicator
10. (CD) Play Indicator
11. (CD) Repeat Indicator
12. EON Indicator
13. Programme Type Indicator
14. Traffic Information Indicator
15. FM Stereo Indicator
16. CD Compartment
17. EON Button
18. On/Stand-by Button
19. Programme Type/Traffic Information Search Button
20. (CD/TAPE) Stop Button
    (TUNER) Memory Clear Button
21. Record Pause Button
22. Bass/Treble Selector Button
23. Memory/Set Button
24. Clock/Timer/Sleep Button
25. Band Selector Button
26. (CD) Review Button
    (TAPE) Rewind Button
    (TUNER) Tuning Down Button
27. Function Selector Button
28. Headphone Socket
29. CD Eject Button
30. ASPM Button
31. Remote Control Sensor
32. Display Mode Selector Button
33. Volume Select Button
34. (CD) Play/Pause Button
    (TAPE) Play Button
35. Jog Dial
36. (CD) Cue Button
    (TAPE) Fast Forward Button
    (TUNER) Tuning Up Button
37. Volume/Jog Dial Selector Button
38. Cassette Compartment

■ Rear panel

1. AC Power Input Socket
2. FM 75 ohms Aerial Socket
3. AM Loop Aerial Input Socket
4. Speaker Terminals

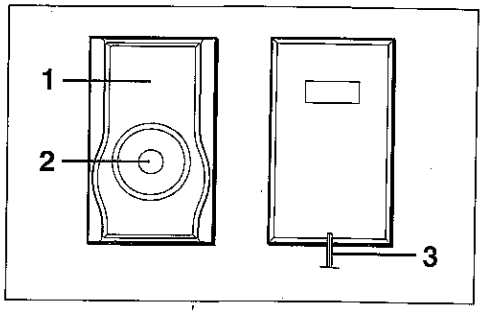

■ Speaker section
1. Bass Reflex Duct
2. Full-Range Speaker
3. Speaker Wire

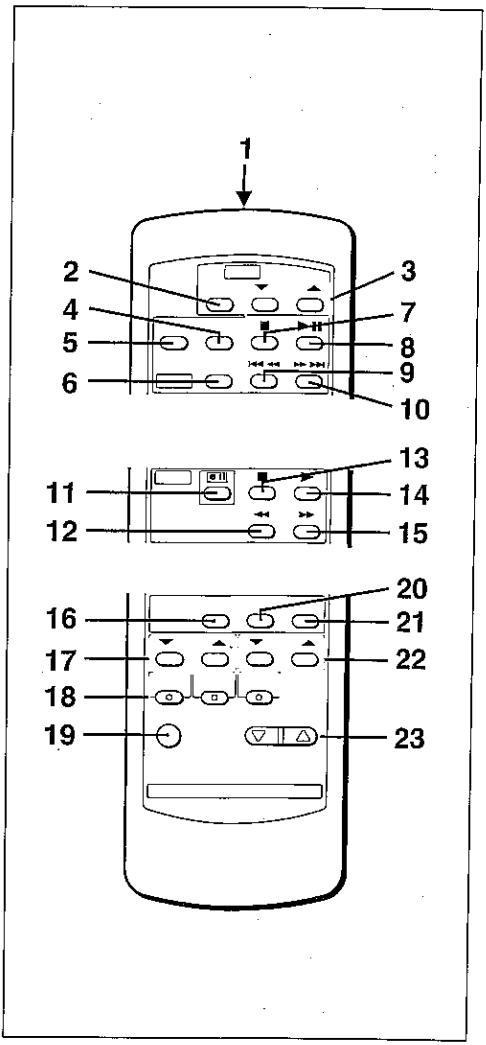

■ Remote control
1. Remote Control Transmitter LED

● Tuner control section
2. Programme Type/Traffic Information Search Button
3. Preset Up/Down Buttons

● CD control section
4. Clear Button
5. Random/Repeat Button
6. Memory Button
7. Stop Button
8. Play/Pause Button
9. Track Down/Review Button
10. Track Up/Cue Button

● Tape control section
11. Record Pause Button
12. Rewind Button
13. Stop Button
14. Play Button
15. Fast Forward Button

● Common section
16. Sleep Button
17. Bass Up/Down Buttons
18. Function Selector Buttons
19. On/Stand-by Button
20. Timer Button
21. Clock Button
22. Treble Up/Down Buttons
23. Volume Up/Down Buttons

- Unplug the AC power lead from the AC socket before connecting or disconnecting any component.

■ Speaker connection

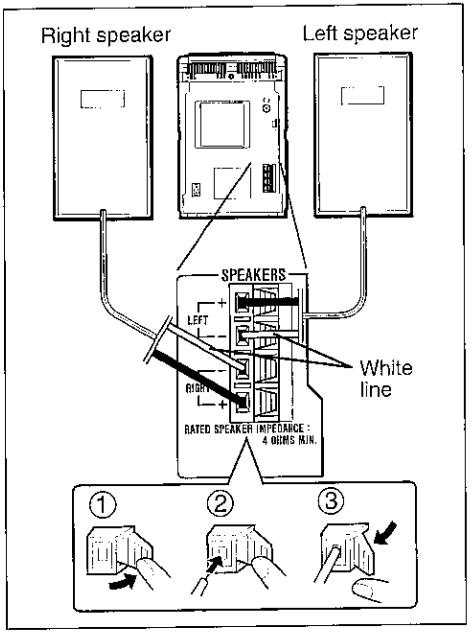

Connect each speaker wire to the SPEAKER terminals as shown.
Use speakers with an impedance of 4 ohms or more.
Use of speakers with an impedance less than 4 ohms may damage your unit.

Notes:

- Connect the wire with the white line to the minus (-) terminal and the plain wire to the plus (+) terminal.
- Do not mix the right channel and left channel wiring when connecting the speakers to the unit.
- Do not let the bare speaker wires touch each other as this may damage the amplifier and/or speakers.
- The speaker grille is not removable.

■ Aerial connection

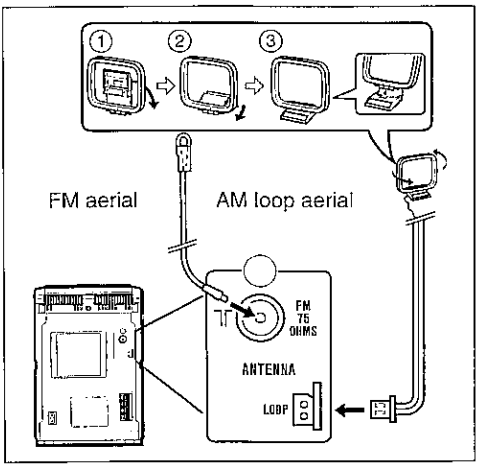

Supplied FM aerial
Connect the FM aerial wire to the FM 75 OHMS socket and position the FM aerial wire in the direction where the strongest signal can be received.

Supplied AM loop aerial
Connect the AM loop aerial wire to the AM LOOP socket. Position the AM loop aerial for optimum reception.
Place the AM loop aerial on a shelf, etc., or attach it to a stand or wall with screws (not supplied).

Notes:

- Do not place the aerial on the main unit as it may result in noise pickup from the internal digital electronics.
  Place the aerial away from the unit for better reception.
- If the AM loop aerial and the FM aerial wire are placed near the AC power lead, it may cause interference in radio reception.

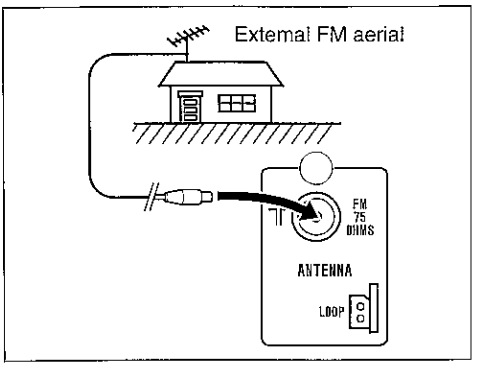

External FM aerial
Use an external FM aerial if you need better reception.
Consult your dealer.

■ Connecting the AC power lead

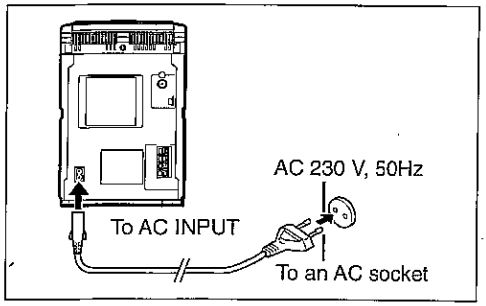

Connect the AC power lead to the AC power input socket, then connect the AC power lead plug to an AC socket.

Notes:
- Unplug the AC power lead from the AC socket if the unit is not to be used for a prolonged period of time.
- Never use a power lead other than the one supplied. Otherwise, a malfunction or an accident may occur.

■ Placing the system

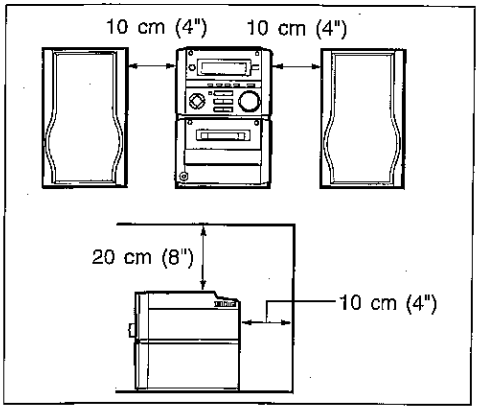

- Be sure to keep space between the units for ventilation.
- Keep the top of this unit at least 20 cm (8") away from the wall, and the back at least 10 cm (4") away.

Note:
- Do not place the system or speakers near the television set as the magnetic fields produced may cause irregular colours to be displayed.

■ Remote control

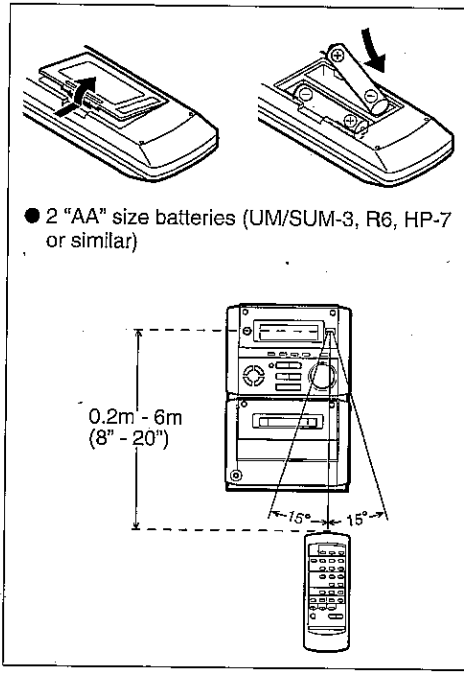

- 2 "AA" size batteries (UM/SUM-3, R6, HP-7 or similar)
- When inserting or removing the batteries, push them towards the ⊖ battery terminals.
- Installing the batteries incorrectly may cause the unit to malfunction.

Precautions for battery use:
- Insert the batteries according to the direction indicated in the battery compartment.
- Replace all old batteries with new ones at the same time.
- Do not mix old and new batteries.
- Remove the batteries if they are weak or if the unit will not be used for long periods of time. This will prevent potential damage due to battery leakage.

Caution:
Do not use rechargeable batteries (nickel-cadmium battery, etc.).

Notes concerning use:
- Replace the batteries if the operating distance is reduced or if the operation becomes erratic.
- Periodically clean the transmitter LED on the remote control and the sensor on the main unit with a soft cloth.
- Exposing the sensor on the main unit to strong light may interfere with operation. Change the lighting or the direction of the unit.
- Keep the remote control away from moisture, excessive heat, shock, and vibrations.

SETTING THE CLOCK

(Main unit operation)
In this example, the clock is set for the 24-hour (0:00) system.

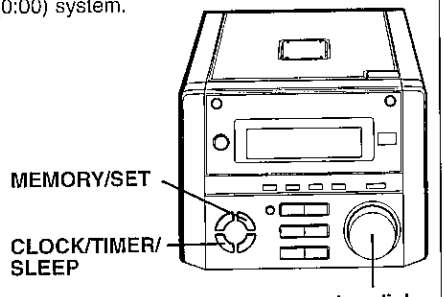

1 Press the CLOCK/TIMER/SLEEP button to enter the time check mode.

2 Within 3 seconds, press the MEMORY/SET button.

3 Turn the jog dial to select the time display mode.

0:00 ⟵ AM 12:00

"0:00" → The 24-hour display will appear. (0:00 - 23:59)

"AM 12:00" → The 12-hour display will appear. (AM 12:00 - PM 11:59)

- Note that this can only be set when the unit is first installed or it has been reset (see page 26).

4 Press the MEMORY/SET button.



5 Adjust the hour by turning the jog dial.



- When the jog dial is turned one click clockwise, the time will increase by 1 hour. When it is turned one click anti-clockwise, the time will decrease by 1 hour.
  Keep turning the jog dial to change the time continuously.
- When the 12-hour display is selected, "AM" will change automatically to "PM".

6 Press the MEMORY/SET button.

7 Adjust the minutes by turning the jog dial.



- When the jog dial is turned one click clockwise, the time will increase by 1 minute. When it is turned one click anti-clockwise, the time will decrease by 1 minute.
  Keep turning the jog dial to change the time continuously.
- The hour setting will not advance even if minutes advance from "59" to "00".

8 Press the MEMORY/SET button.



- The clock starts operating from "0" second. (Seconds are not displayed.)

Note:

- In the event of a power failure or when the AC power lead is disconnected, the clock display will go out.
  When the AC power supply is restored, the clock display will flash on and off to indicate the time when the power failure occurred or when the AC power lead was disconnected.
  If this happens, follow the procedure below to change the clock time.

To change the clock time:
Perform steps 1, 2 and 4 - 8 above.

To change the time display mode:

1 Perform steps 1 - 3 in the section "RESETTING THE MICROCOMPUTER", on page 26.

2 Perform steps 1 - 8 above.

■ Volume

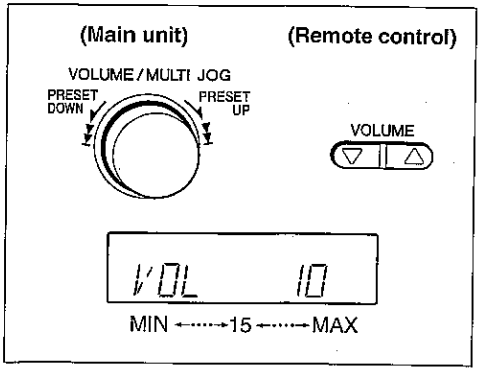

(Main unit operation)
When the VOLUME control is turned clockwise, the volume will increase. When it is turned anti-clockwise, the volume will decrease.

(Remote control operation)
Press the VOLUME △ button to increase the volume and the VOLUME ▽ button to decrease the volume.

Servo Powered Volume:

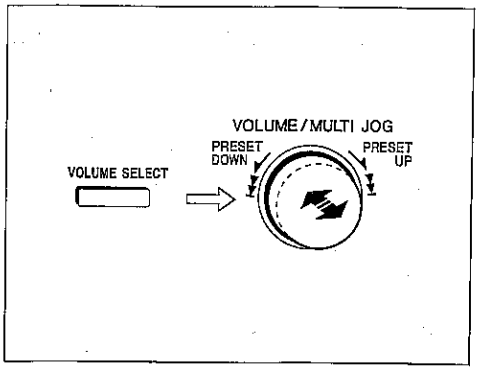

- The jog dial automatically comes out when the power is turned on, and goes back when the unit is set to the stand-by mode.
- When the power is turned on, you can put the jog dial in and out by pressing the VOLUME SELECT button.

Note:
Do not push in the jog dial forcibly with your finger.

■ Bass

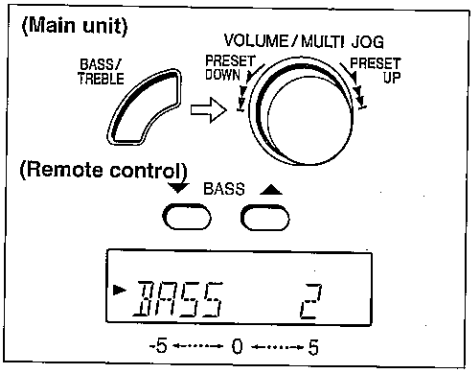

(Main unit operation)

1 Press the BASS/TREBLE button to select "BASS".

2 Turn the jog dial to adjust the bass.

(Remote control operation)
Press the BASS (▽ or △) button to adjust the bass.

■ Treble

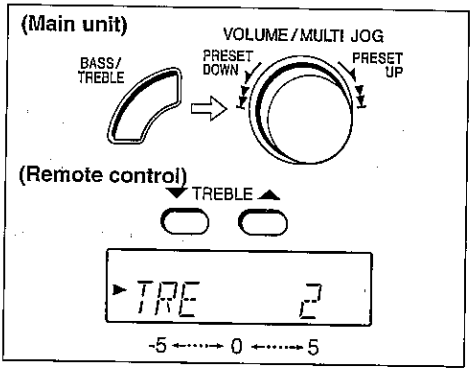

(Main unit operation)

1 Press the BASS/TREBLE button to select "TRE".

2 Turn the jog dial to adjust the treble.

(Remote control operation)
Press the TREBLE (▽ or △) button to adjust the treble.

■ CD playback

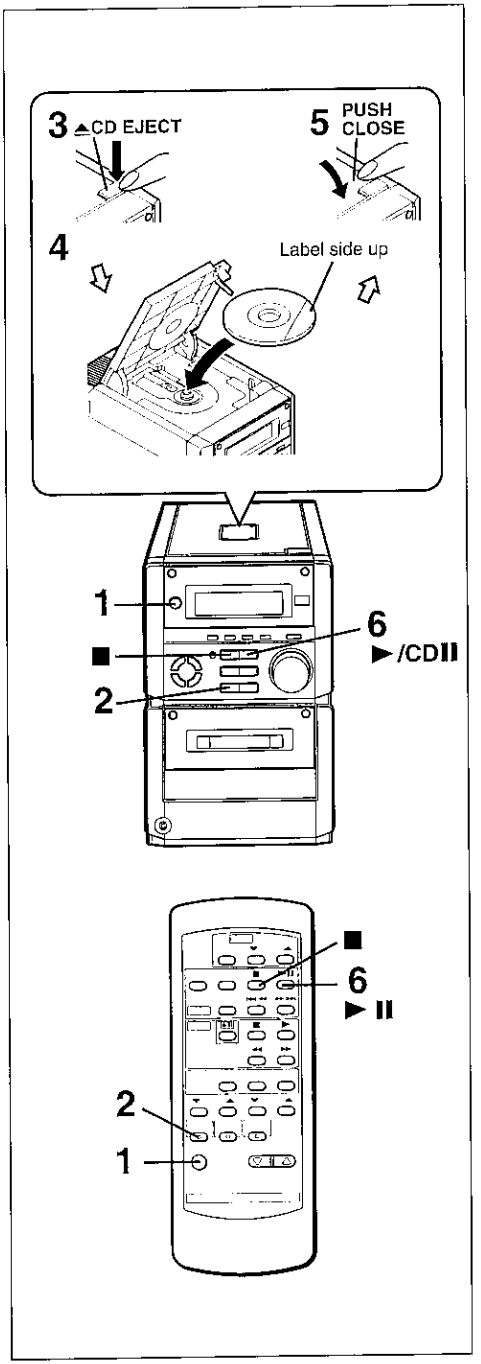

1 Press the ON/STAND-BY button to turn the power on.

2 Press the FUNCTION button until "CD" or "NO DISC" appears in the display.
- Press the CD button on the remote control.
- If no disc is loaded, the display will be "NO DISC" intead of "CD".

3 Press the ▲ CD EJECT button to open the CD compartment.

4 Place a compact disc on the spindle, label side up.

5 Close the CD compartment by firmly pushing the corner marked "PUSH CLOSE".
- The total number of tracks and the total playing time will be displayed.

6 Press the ► / CD II (► II) button to start playback from track 1.
- When the last track on the disc has finished playing, the unit will stop automatically.

To interrupt playback:

① Press the ► / CD II (► II) button.

② Press the ► / CD II (► II) button again to resume playback from the same point.

To stop playback:

Press the ■ button.

After use:

Press the ON/STAND-BY button to enter the stand-by mode.

Caution:
- Do not open the CD compartment during playback (or whilst paused).
- If the disc is damaged, dirty, or loaded upside down, "NO DISC" or "READ ERR" will appear in the display.
  Clean, replace, or reload the disc properly.
- Keep foreign objects out of the CD compartment.
- Subjecting the unit to shock or vibration may cause mistracking.
- When the unit is not being used, be sure to close the CD compartment. If it is left open, the lens may become covered with dust and the unit may not operate properly.
- Playing certain compact discs at a high volume may cause mistracking. In this case, listen at lower volume.
- If TV or radio interference occurs during CD operation, move the unit away from the TV or radio.

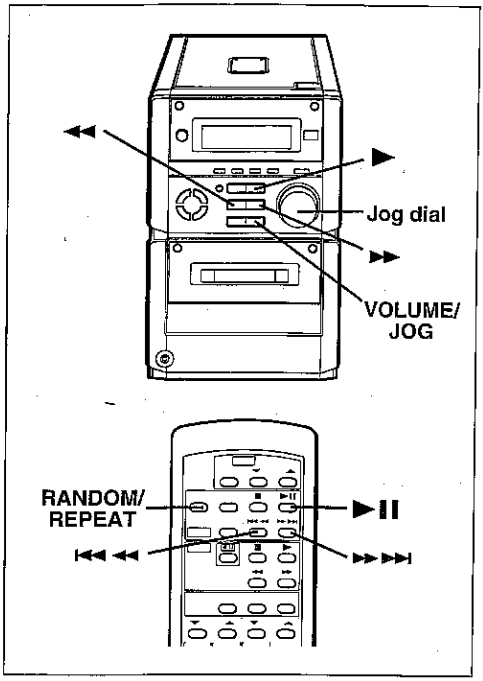

■ Repeat and random play

(Remote control operation)

1 Press the RANDOM/REPEAT button.
- Each time this button is pressed, the mode will change in the following order:

Repeat play ⟶ Random play ⟶ Nomal play

2 Press the ▶ / CD(▶II) button to start playback.

To cancel repeat or random play:
Press the RANDOM/REPEAT button until " ⊂ " or "RANDOM" disappears.

To repeat playback of selected tracks:
After entering the programme for the tracks you want to listen to using "APMS", select repeat play and start playback.

Notes:
- If you press the ▶▶ ▶▶I button during random play, you can move to the next track. On the other hand, the I◀◀ ◀◀ button does not allow you to move to the previous track. The beginning of the track being played will be located.
- When using random play or repeat play, be sure to press the ■ button after you are through listening. Otherwise, the disc will play continuously.
- During APMS operation, random play is not possible.

■ APSS (Auto Program Search System)

APSS automatically locates the beginning of any track.

To listen again to the track being played:
(Main unit operation)

1 Press the VOLUME/JOG button.
- The track number will flash.

2 Whilst the track number is flashing, turn the jog dial anti-clockwise.

(Remote control operation)
Press the I◀◀ ◀◀ button for less than 0.5 seconds during playback.

To move to the beginning of the next track:
(Main unit operation)

1 Press the VOLUME/JOG button.
- The track number will flash.

2 Whilst the track number is flashing, turn the jog dial clockwise.

(Remote control operation)
Press the ▶▶ ▶▶I button for less than 0.5 seconds during playback.
- To skip a number of tracks at one time, press the I◀◀ ◀◀ or ▶▶ ▶▶I button on the remote control repeatedly until the desired track number is shown.
- To start playing at a desired track, press the I◀◀ ◀◀ or ▶▶ ▶▶I button on the remote control whilst in the stop mode to select the track number, and then press the ▶ / CD II (▶ II) button.

■ Cue and review

1 Load a disc and begin playback.

2 Hold the ▶▶ button down for audible fast forward, and hold the ◀◀ button down for audible fast reverse.

3 Normal playback will resume when the ▶▶ or ◀◀ button is released.

Notes:
- When the end of the disc is reached whilst cueing, the "END" will appear in the display and CD operation is paused. Press the ■ button to stop CD operation.
- If the beginning of the disc is reached whilst reviewing, playback will start when you release the ◀◀ button.

■ APMS (Automatic Programmable Music Selector)

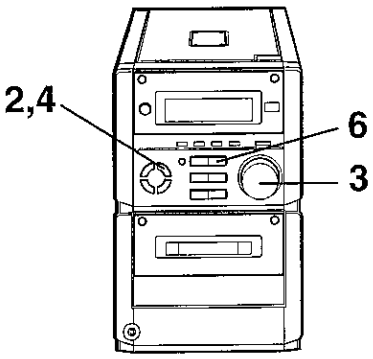

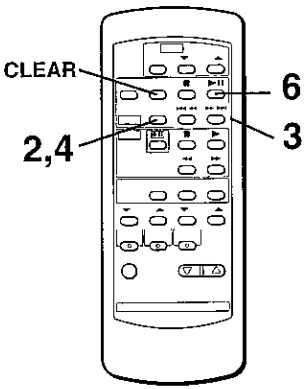

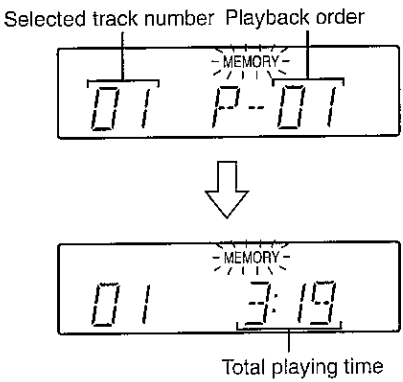

- The CD can be programmed to play the tracks in any order, or skip certain tracks.

1 Load a compact disc and close the CD compartment.

2 Press the MEMORY/SET (MEMORY) button to prepare for programming.
- "MEMORY" will flash.

3 Within 30 seconds, turn the jog dial on the main unit or press the ⏮ ◀◀ or ▶▶ ⏭ button on the remote control to select the desired track.

4 Press the MEMORY/SET (MEMORY) button.
- The selected track number and the programmed playback order will be displayed.
- After 2 seconds, the total playing time of the programmed tracks will be displayed automatically.

5 Repeat steps 3 - 4 for any other track. Up to 20 tracks can be programmed.
- If you make a mistake whilst in the programming mode (when MEMORY is flashing) or if you change your mind, the programmed tracks can be cleared by pressing the CLEAR button on the remote control. The tracks will be cleared sequentially starting with the last entered track.

6 Press the ▶ / CD ⏸ (▶ ⏸) button to start playback of programmed selections.

To clear all the programmed selections:

To cancel a programmed sequence, press the CLEAR button on the remote control whilst the disc is stopped and the "MEMORY" indicator is lit.

Notes:
- Opening the CD compartment automatically cancels the programmed sequence.
- Even if you press the ON/STAND-BY button to enter the stand-by mode or the function is changed from CD to some other function, the programmed selections will not be cleared.
- Programming is not possible during CD playback. It must be performed whilst the CD is stopped.
- When in the random play mode (whilst "RANDOM" is lit), programming is not possible. To perform any programming, cancel the random play mode.

■ Tape playback

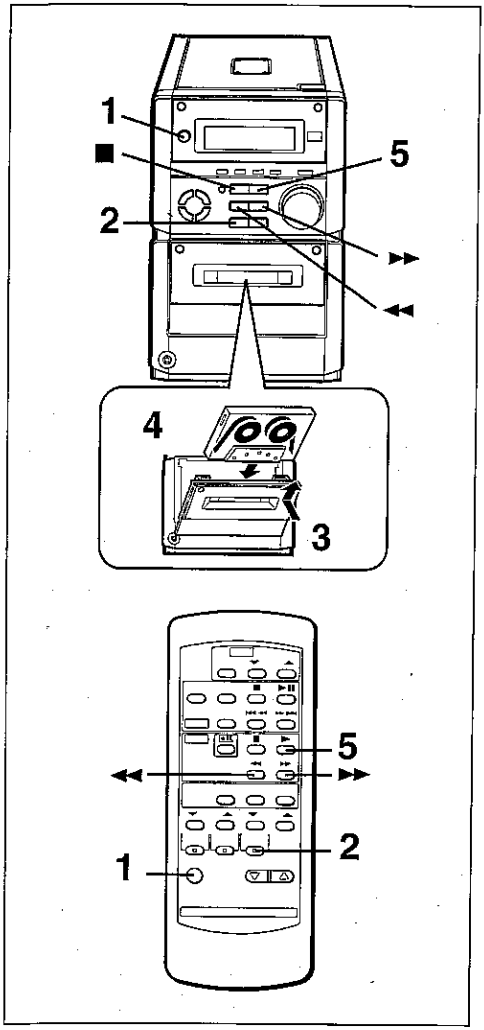

1 Press the ON/STAND-BY button to turn the power on.

2 Press the FUNCTION button until "TAPE" appears in the display.
- Press the TAPE button on the remote control.

3 Open the cassette door by pushing the area marked "⏏ PUSH EJECT".

4 Load the cassette into the cassette compartment.

5 Press the ▶ button.

To stop playback:
Press the ■ button.

Fast forward/rewind:
To advance the tape, press the ▶▶ button. To rewind, press the ◀◀ button.

Caution:
- When removing the cassette tape, press the ■ button, and then open the cassette compartment.
- Before changing from one tape operation to another, press the ■ button.
- If a power failure occurs during tape operation, the tape head will remain engaged with the tape and the cassette door will not open. In this case, wait until power is restored.
- Even if the ▶ / CD ❚❚ button is pressed during tape playback, the unit will not enter the pause mode.
  The pause mode is only active during synchronized operation of the cassette deck and CD.
  In the normal cassette mode, use the ■ button.

■ Tuning

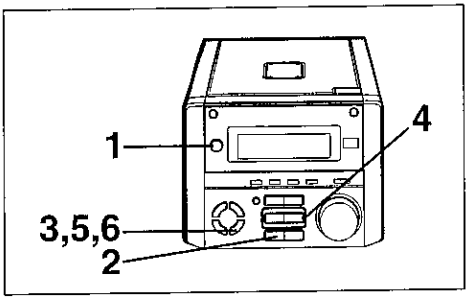

1 Press the ON/STAND-BY button to turn the power on.

2 Press the FUNCTION button until "FM" or "AM" appears in the display.

3 Press the BAND button to select the desired frequency band. (FM ST, FM or AM)

4 Press the TUNING (∨ or ∧) button to tune in to the desired station.

Manual tuning:
Press the TUNING (∨ or ∧) button as many times as required to adjust the frequency shown on the display to the frequency of the desired station.

Auto tuning:
When the TUNING (∨ or ∧) button is pressed for more than 0.5 seconds, scanning will start automatically and the tuner will stop at the first receivable broadcast station.

Notes:
- When radio interference occurs during auto scan tuning, auto scan tuning may stop automatically at that point.
- If a weak station signal is found during auto scan tuning, the station will be skipped.
- To stop the auto tuning, press the TUNING (∨ or ∧) button again.
- When an RDS (Radio Data System) station is tuned in, the frequency will be displayed first and then the RDS indicator will light. Finally, the station name will appear.

5 To receive an FM stereo transmission, press the BAND button so that the "ST" indicator on the display lights up.
- "ꝏ" will appear when an FM broadcast is in stereo.

6 If the FM reception is weak, press the BAND button so that the "ST" indicator goes out.
- The reception changes to monaural, the sound becomes clearer.

Note:
- The last station tuned in will be recalled, even after changing the tuning band or the function, or after switching the unit to the stand-by mode.

■ Preset tuning

You can store up to 30 stations in memory (30 stations consisting of any combination of FM and AM stations you like) and recall them.

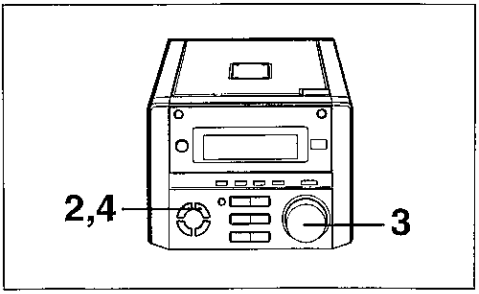

To enter stations into memory:

1 Perform steps 1 - 6 in the "Tuning" section.

2 Press the MEMORY/SET button.
- "MEMORY" will flash.

3 Within 5 seconds, turn the jog dial to make the preset channel number flash in the display.
- Store the stations in memory, in order, starting with preset channel 1.

4 Within 5 seconds, press the MEMORY/SET button to store that station in the selected station preset number memory.
- If the "MEMORY" and preset number indicators go out before the station is memorised, repeat the operation from step 2.

5 Repeat steps 1 - 4 to set other preset stations, or to change a preset station.

After use:
Press the ON/STAND-BY button to enter the stand-by mode.

To recall a memorised station:

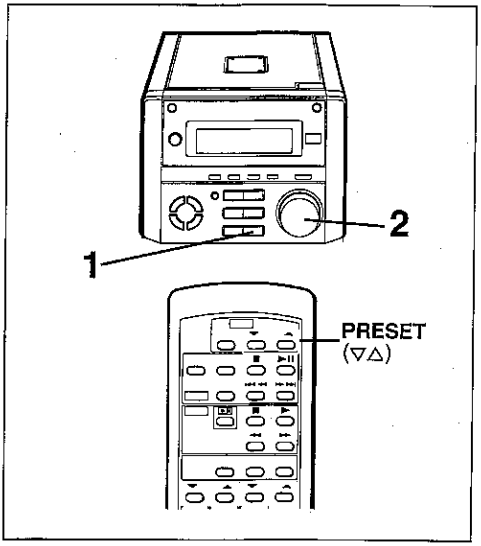

(Main unit operation)

1 Press the VOLUME/JOG button.
- The preset channel number will flash.

2 Whilst the preset channel number is flashing, turn the jog dial to select the desired station.

(Remote control operation)
Press the PRESET (▽ or △) button for less than 0.5 seconds to select the desired station.
- The stations (preset channel number, frequency and frequency band) which have been stored in memory will appear in the display in numerical order, irrespective of the frequency bands.

Note:
When searching for a memorised station, do not press the PRESET button for more than 0.5 seconds.
When the PRESET button is pressed for more than 0.5 seconds, the unit will enter the preset memory scan mode.

To clear a memorised station:

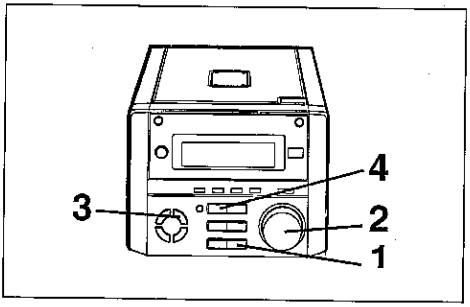

1 Press the VOLUME/JOG button.

2 Turn the jog dial to select the preset channel number you want to erase.

3 Press the MEMORY/SET button.

4 Within 5 seconds, press the TUN CLEAR button.

■ Preset memory scan

The stations saved in the preset memory can be scanned automatically.

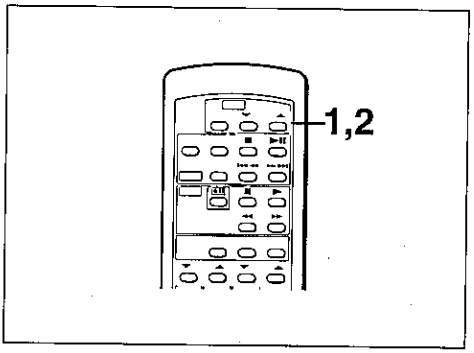

1 To scan the preset stations, press the PRESET (▽ or △) button for more than 0.5 seconds.
- The station preset number flashes and programmed stations are sequentially received for 5 seconds each.

2 Press the PRESET (▽ or △) button again to stop the memory scan at the desired station.

Note:
When the preset memory does not have any stations stored in it, the preset memory scan will not function.

Backup function:
The backup function protects all station presets for a few hours should there be a power failure or the AC power lead is removed from the AC socket.

RDS (Radio Data System) OPERATION

RDS is a broadcasting service which a growing number of FM stations are now providing. It allows these FM stations to send additional signals along with their regular programme signals. For example, the stations send their station names, and information about what type of programme they broadcast, such as sports or music, etc.
When tuned to an FM station providing the RDS service, RDS will appear, the station frequency (and then the station name if sent) will be displayed.
The TP (Traffic Programme) will appear on the display when the received broadcast carries traffic announcements, and the TA (Traffic Announcement) will appear whilst a traffic announcement is being received.
EON will appear whilst the EON (Enhanced Other Networks information) data is being broadcast.

Note:
When the TP and TA appear at the same time, an announcement is being made.
When only the TA appears, an announcement is not being made. (See page 22.)

■ Information Provided by RDS

With the XL-40H/XL-50H, you can display two types of RDS service. To show them in the display, press the DISPLAY MODE button.
Each time you press the DISPLAY MODE button, the display will change to show the following information.

PS (Programme Service): Station names commonly known will be displayed. "NO PS" appears if no signal is being received.

PTY (Programme Type): Programme type will be displayed. "NO PTY" appears if no signal is being received.

Station Frequency: Station frequencies.

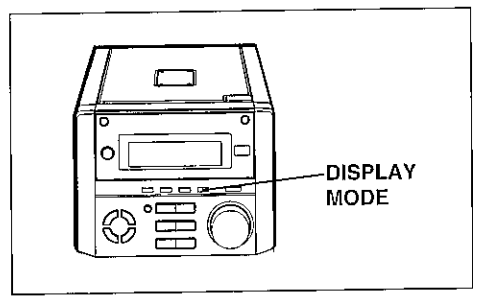

Descriptions of the PTY (Programme Type) codes, TP (Traffic Programme) and TA (Traffic Announcement)
With the XL-40H/XL-50H, you can search for and receive the following PTY, TP and TA signals.

NEWS: Short accounts of facts, events and publicly expressed views, reportage and actuality.

AFFAIRS: Topical programme expanding or enlarging upon the news, generally in different presentation style or concept, including debate, or analysis.

INFO: Programmes whose purpose is to impart advice in the widest sense.

SPORT: Programme concerned with any aspect of sport.

EDUCATE: Programme intended primarily to educate, of which the formal element is fundamental.

DRAMA: All radio plays and serials.

CULTURE: Programmes concerned with any aspect of national or regional culture, including language, theatre, etc.

SCIENCE: Programmes about the natural sciences and technology.

VARIED: Used for mainly speech-based programmes usually of light-entertainment nature, not covered by other categories. Examples include: quizzes, panel games, personality interviews.

POP M: Commercial music, which would generally be considered to be of current popular appeal, often featuring in current or recent record sales charts.

ROCK M: Contemporary modern music, usually written and performed by young musicians.

EASY M: Current contemporary music considered to be "easy-listening", as opposed to Pop, Rock or Classical, or one of the specialised music styles, Jazz, Folk or Country. Music in this category is often but not always, vocal, and usually of short duration.

LIGHT M: Classical Musical for general, rather than specialist appreciation. Examples of music in this category are instrumental music, and vocal or choral works.

CLASSICS: Performances of major orchestral works, symphonies, chamber music, etc., and including Grand Opera.

OTHER M: Musical styles not fitting into any of the other categories. Particularly used for specialist music of which Rhythm & Blues and Reggae are examples.

WEATHER: Weather reports and forecasts and meteorological information.

FINANCE: Stock Market reports, commerce, trading, etc.

CHILDREN: For programmes targeted at a young audience, primarily for entertainment and interest, rather than where the objective is to educate.

SOCIAL: Programmes about people and things that influence them individually or in groups. Includes: sociology, history, geography, psychology and society.

RELIGION: Any aspect of beliefs and faiths, involving a God or Gods, the nature of existence and ethics.

PHONE IN: Involving members of the public expressing their views either by phone or at a public forum.

TRAVEL: Features and programmes concerned with travel to near and far destinations, package tours and travel ideas and opportunities. Not for use for announcements about problems, delays, or road-works affecting immediate travel where TP/TA should be used.

LEISURE: Programmes concerned with recreational activities in which the listener might participate. Examples include, Gardening, Fishing, Antique collecting, Cooking, Food & Wine, etc.

JAZZ: Polyphonic, syncopated music characterised by improvisation.

COUNTRY: Songs which originate from, or continue the musical tradition of the American Southern States. Characterised by a straightforward melody and narrative story line.

NATION M: Current Popular Music of the Nation or Region in that country's language, as opposed to international 'Pop' which is usually US or UK inspired and in English.

OLDIES: Music from the so-called "golden age" of popular music.

FOLK M: Music which has its roots in the musical culture of a particular nation, usually played on acoustic instruments. The narrative or story may be based on historical events or the people.

DOCUMENT: Programme concerned with factual matters, presented in an investigative style.

TEST: Broadcast when testing emergency broadcast equipment or receivers.

ALARM: Emergency announcement made under exceptional circumstances to give warning of events causing danger of a general nature.

NONE: No programme type (receive only).

TP: Broadcasts which carry traffic announcements.

TA: Traffic announcements are being broadcast at present.

Note:

- When the unit is in the EON stand-by mode and a programme is selected, the unit will display "TI" instead of "TP" or "TA".

■ ASPM (Auto Station Program Memory)

At first, it is recommended that you store stations in memory using ASPM.
(This memory can be used for PTY searches.)
When the ASPM button is pressed whilst tuned to the FM band, the RDS (Radio Data System) function will automatically search for new RDS stations. Up to 30 stations can be stored in memory. (If you have already stored some stations in memory, the number of new stations you can store will be less.)

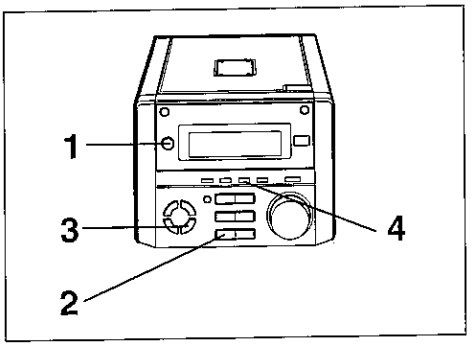

1 Press the ON/STAND-BY button to turn the power on.

2 Press the FUNCTION button until "FM" or "AM" appears in the display.

3 Press the BAND button to select the FM ST or FM band.

- Even if FM monaural is selected, if ASPM scanning is being performed, the unit will enter the FM stereo mode.

4 Press and hold down the ASPM button for at least 3 seconds.

① After "ASPM" has flashed for about 4 seconds, scanning will start. (87.50 - 108.00 MHz)

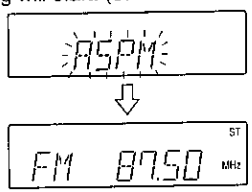

② When an RDS station is found, "RDS" will appear first, and then "MEMORY" and the preset channel number will flash for 2 seconds. Finally, the station will be stored in memory.

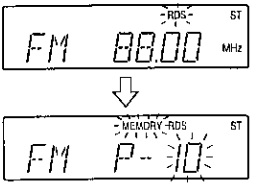

③ After scanning, the number of stations that have been stored in memory automatically will flash for 4 seconds.

Notes:

- Only RDS stations can be stored in memory.
- If the same station is broadcasting on different frequencies, the transmission with the strongest broadcast frequency will be stored in memory.
- Any station which has the same frequency as one which has been already stored in memory will not be stored again.
- If a 30th station is stored in memory during a scan, the scanning will stop at that station. The number of stations will flash for 4 seconds.
- If no stations have been stored in memory, "0MEMORY" will appear for about 4 seconds.
- If 30 stations have already been stored in memory and the ASPM button is pressed, "ASPM" will flash for 4 seconds and the scan will be aborted.
  If you want to redo the ASPM operation from the beginning, erase the preset memory, and then perform steps 1 - 4.

To stop the ASPM operation before it is complete:

Press the ASPM button whilst it is scanning for stations.

- The stations that have already been stored in memory will be kept there.

To erase one of the contents of preset memory:

1 Press the VOLUME/JOG button.

2 Turn the jog dial to select the preset channel number you want to erase.

3 Press the MEMORY/SET button.

4 Within 5 seconds, press the TUN CLEAR button.

To erase all of the contents of preset memory:

Perform steps 1 - 3 in the section "RESETTING THE MICROCOMPUTER", on page 26.

■ To recall stations that have been stored in memory (PTY search)

You can search a desired station by specifying the programme type (news, sports, traffic programme, etc. ... see pages 15-16) from among the stations that have been stored in memory.
(ASPM is convenient for storing stations in memory.)

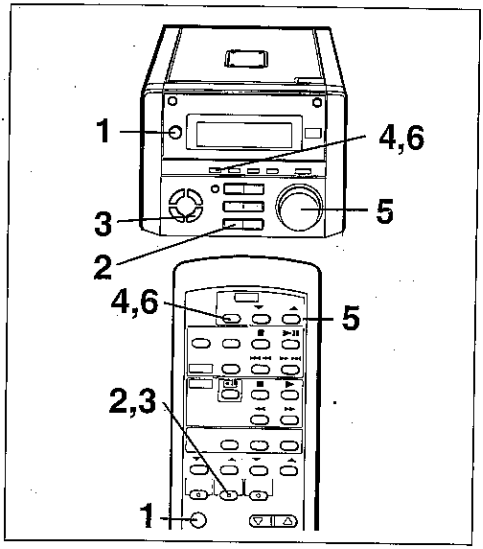

1 Press the ON/STAND-BY button to turn the power on.

2 Press the FUNCTION button until "FM" or "AM" appears in the display.

3 Press the BAND button to select the FM ST or FM band.

4 Press the PTY.TI SEARCH (PTY.TI) button.



- "PTY TI" will flash for about 4 seconds.

5 Within 4 seconds, turn the jog dial on the main unit or press the PRESET (▽ or △) button on the remote control to select the programme type you want.



- Each time the button on the remote control is pressed, the programme type will appear. If the button is held down for more than 0.5 seconds, the programme type will continuously change.

6 Whilst the selected programme type is flashing (within 4 seconds), press the PTY.TI SEARCH (PTY.TI) button again.

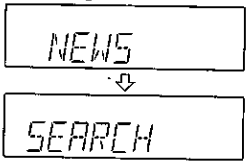

- After the name of the selected programme type has been lit for 2 seconds, "SEARCH" will appear, and the search operation will start.

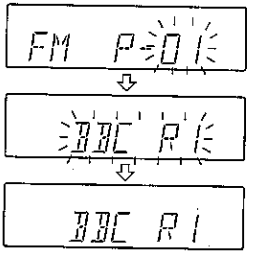

Note:
If the programme type has changed from flashing to steadily lit and the PTY.TI SEARCH (PTY.TI) button is pressed, nothing will happen. In this case, start again from step 4.
Each time a station of the programme type you want is encountered, you will be able to listen to the broadcast.
The channel number will flash for about 4 seconds. The station name will flash for 7 seconds, and then remain lit.

- If you want to listen to another station of that programme type, press the PTY.TI SEARCH (PTY.TI) button whilst the channel number or station name is flashing. The unit will look for the next station of that type.

Note:

- If no station of the programme type you want can be found, "NOTFOUND" will appear for 4 seconds.

★ If you have selected the traffic programme:
If you select traffic programme (TP) as the programme type in step 5, to receive only radio stations which broadcast traffic programmes, the TP will appear.
(However, this does not necessarily mean that you will hear any traffic announcements at that time.)
When a traffic announcement is actually being made, the TA will appear.
(When both the TP and TA appear, an announcement is being made.)

■ To manually recall the stations stored in memory

(Main unit operation)

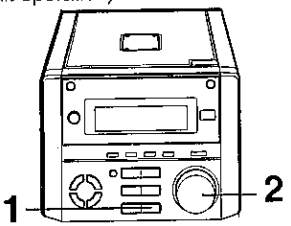

1 Press the VOLUME/JOG button.

2 Each time you turn the jog dial one step, the channel number will change.

- After the channel number has been displayed for 5 seconds, the frequency for that channel will appear for 2 seconds, and then the station name will appear.

■ Notes for RDS operation

If any of the following events occur, it does not mean that the unit is faulty.

- "PS" and a station name appear alternately, and the unit does not operate properly.
- If a particular station is not broadcasting properly or a station is conducting tests, the RDS reception function may not work properly.

■ To switch the display

(Main unit operation)

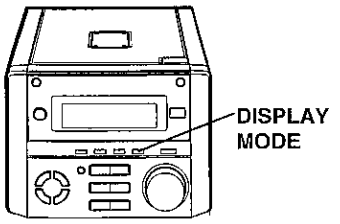

Each time the DISPLAY MODE button is pressed whilst an FM station is tuned in, the display will switch as follows:

Station name (PS)



Programme type (PTY)



Frequency



When the station you are tuning in is not an RDS station or even if it is an RDS station but there is no station name or programme type information available, the display will switch as follows:

"NO PS"



"NO PTY"



Frequency



Notes:

- "NO PS" or "NO PTY" will flash for about 5 seconds, and then the frequency will be displayed.
- The display can only be switched whilst tuned to the FM band.

■ EON-PTY

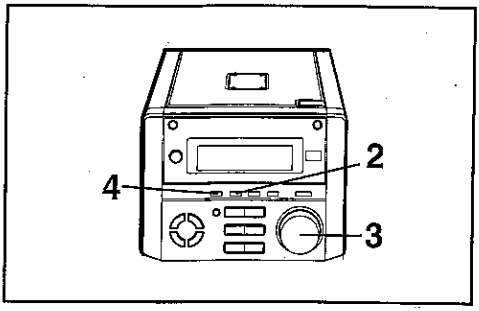

1 Tune in the desired RDS station (when a station name is being displayed).



2 Press the EON button when "EON" appears.



- "PTY TI" will flash for about 4 seconds.

3 Whilst they are being displayed, select the desired programme type by turning the jog dial.



- The selected programme type will flash.

4 Within 4 seconds, press the PTY.TI SEARCH button.

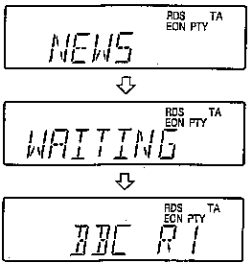

- The programme type and "WAITING" will be displayed for 2 seconds each.
- "PTY" will appear, and the unit will enter the EON-PTY stand-by mode.

5 When a programme of the type specified starts on an ON (other network) station, the unit will automatically switch to the station broadcasting the selected programme type, and "PTY" will flash.



6 When the programme specified for the ON station is over, the unit will automatically return to the original station you were tuned to.

Note:

- If the EON button is pressed when "EON" is not displayed, "NO EON" will appear for 4 seconds to indicate that the unit cannot enter the EON stand-by mode.

Checking the stand-by mode setting:

When in the EON stand-by mode, press the EON button.
("Programme type" →"WAITING")

To cancel the EON stand-by mode:

When in the EON stand-by mode, press the EON button. Within 4 seconds, press it again. The EON stand-by mode will be cancelled.

- "PTY" will go out.

■ EON-TI

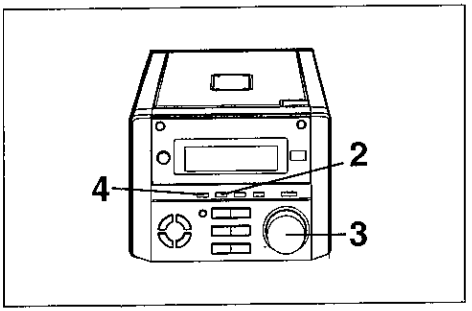

1 Tune in the desired RDS station (when a station name is being displayed.)



2 Press the EON button when "EON" appears.



- "PTY TI" will flash for about 4 seconds.

3 Whilst they are being displayed, select the TI (Traffic Information) using the jog dial.



- The selected "TI" will flash.

4 Within 4 seconds, press the PTY.TI SEARCH button.

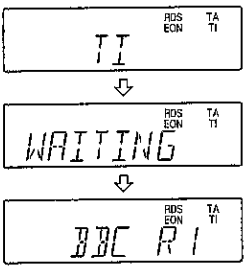

- "TI" and "WAITING" will appear for 2 seconds each.
- "TI" will appear, and the unit will enter the EON-TI stand-by mode.

5 When a TA specified starts on an ON (other network) station, the unit will automatically switch to that station, and "TI" will flash.

6 When the traffic announcement is over, the unit will automatically return to the original station you were tuned to.

Note:

- If the EON button is pressed when "EON" is not displayed, "NO EON" will appear for 4 seconds to indicate that the unit cannot enter the EON stand-by mode.

Checking the stand-by mode setting:

When in the EON stand-by mode, press the EON button. ("TI" →"WAITING")

To cancel the EON stand-by mode:

When in the EON stand-by mode, press the EON button. Within 4 seconds, press it again. The EON stand-by mode will be cancelled.

- "TI" will go out.

Note:

- If neither "TP" nor "TA" appear, then even if "EON" appears the unit cannot enter the EON-TI stand-by mode. In this condition, even if the EON button is pressed, "NO TI" will flash for 4 seconds.

About the TP and TA indicators

TP indicator	TA indicator	Meaning
Not lit	Not lit	This programme does not carry traffic announcements nor does it refer, via EON, to a programme that does.
Not lit	Lit	This programme carries EON information about another programme which gives traffic information.
Lit	Not lit	This programme carries traffic announcements but none are being broadcast at present and may also carry EON information about other traffic announcements.
Lit	Lit	A traffic announcement is being broadcast on this programme at present.

In the following cases, the EON stand-by mode will be cancelled.

- When the unit is set in the stand-by mode.
- When the unit is switched to another band in the EON stand-by mode.
- When you change the FM station whilst in the EON stand-by mode.
- When a preset call is made.

Notes:

- During the same programme as the specified PTY (or TA) is being broadcast on the station you are receiving, the unit will not switch to other network station.
- If there are more than two other network stations you want to listen to, compare the strength of each station's signal and tune in the station with the strongest signal. (EON-AF)
  However, if the frequency of other network station has been stored in the preset channel memory, the unit will switch to that preset channel.
- If you want to cancel the reception of an ON (other network) station which was tuned in by the EON system and return to the original station you were receiving, press the EON button.
- After the unit returns to the original station, the stand-by mode will still be active. (The "TI" or "PTY" will remain lit.)
- The unit will not switch from the ON station to another network station. The unit returns to the original station.
- When the unit switches automatically to "other network" station, if there is any problem with this station or the station cannot be received properly, "WEAK SIG" will appear and the unit will return to the original station.

- When recording important selections, be sure to make a preliminary test to ensure that the desired material is being properly recorded.
- The ALC (Automatic Record Level Control) circuit automatically controls the level of the input signal used for recording.
- The VOLUME, BASS and TREBLE controls may be adjusted with no effect on the recorded signal. (Variable Sound Monitor)
- Metal and CrO_2 tapes should not be used for recording.

■ Recording from the built-in CD player (CD Synchronised Recording System)

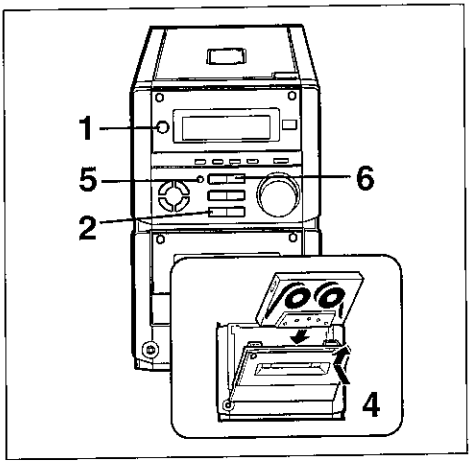

1 Press the ON/STAND-BY button to turn the power on.

2 Press the FUNCTION button until "CD" or "NO DISC" appears in the display.

3 Load the desired disc.
- Use the APMS function to store the tracks you want to record in memory. (See page 11.)

4 Load a cassette into the cassette compartment.

5 Press the REC PAUSE button.
- "REC" will flash.

6 Press the ▶ button.

To stop recording:
Press the ■ button.
- The tape will stop. When the ■ button is pressed again, the CD will stop.
- When you press the CD ■ button on the remote control, the CD and tape will stop.

■ Recording from the built-in radio

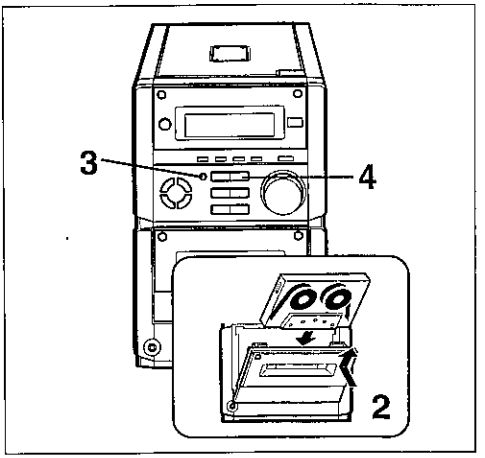

1 Tune in to the desired station. (See pages 13 - 14.)

2 Load a cassette into the cassette compartment.

3 Press the REC PAUSE button.
- "REC" will flash.

Note:
- If a whistling noise is heard whilst recording from an AM station, move the AM loop aerial to a position where noise is no longer heard from the unit.

4 Press the ▶ button.

To stop recording:
Press the ■ button.

■ Erasing a recorded tape

1 Press the FUNCTION button until "TAPE" appears in the display.

2 Press the REC PAUSE button.
- "REC" will flash.

3 Press the ▶ button.

■ Timer playback

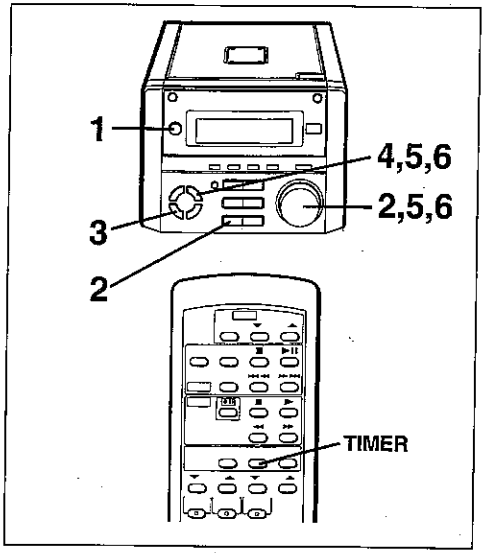

- Before setting the timer, make sure that the clock setting is correct. (Page 7)

1 Press the ON/STAND-BY button to turn the power on.

2 Press the FUNCTION button to select the desired function, and then adjust the sound volume using the jog dial.

3 Press the CLOCK/TIMER/SLEEP button repeatedly until "⏲" is displayed.



4 Within 6 seconds, press the MEMORY/SET button.

- If more than 6 seconds have passed, start again from step 3.



5 Turn the jog dial to set the hour at which to start, and then press the MEMORY/SET button.

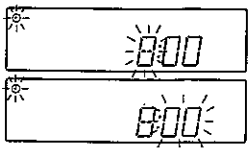

6 Turn the jog dial to set the minute at which to start, and then press the MEMORY/SET button.

- The timer playback starting time, function, and volume will be displayed, and then the unit will enter the stand-by mode automatically.
- "⏲" will appear and the current time will be displayed.

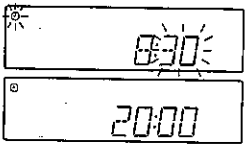

7 When the preset time is reached, the volume will increase gradually.

8 If you select CD or TAPE in the timer operation, the unit will enter the stand-by mode after the playback. If you select TUNER, it will enter the stand-by mode one hour after the timer playback starts.

Caution:

- Timer recording is not possible.
- Recording operations are not possible during timer playback.

To confirm the timer setting:

Press the CLOCK/TIMER/SLEEP button on the main unit twice or press the TIMER button on the remote control once.

- The timer playback starting time, function, and volume will be displayed.
- If you press the TIMER button on the remote control whilst confirming the timer setting (whilst "⏲" is flashing), you can turn the timer playback stand-by mode on or off.

To change the programmed contents:

After cancelling the timer mode, perform steps 1 - 6 above.

To cancel timer operation:

Press the ON/STAND-BY button to turn the power on.

Note:

- The previously programmed timer starting time will be stored until it is reprogrammed.

■ Sleep operation

The radio, compact disc and cassette deck can all be turned off automatically.

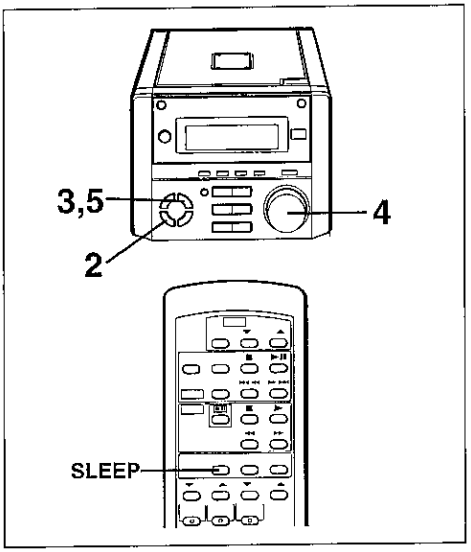

(Main unit operation)

1 Play back the desired sound source.

2 Press the CLOCK/TIMER/SLEEP button repeatedly until "SLEEP" is displayed.



3 Within 5 seconds, press the MEMORY/SET button.

4 Turn the jog dial to set the time.
(Maximum 3 hours - Minimum 5 minutes, 5-minute intervals)

OFF ↔ 5 minutes .... ↔ 3 hours

5 Press the MEMORY/SET button.

6 The unit will enter the stand-by mode automatically after the preset sleep time has elapsed.
(The volume will gradually decrease one minute before the preset sleep time expires.)

To confirm the remaining sleep time:

Press the CLOCK/TIMER/SLEEP button three times.

(Remote control operation)

1 Play back the desired sound source.

2 Press the SLEEP button.

● The sleep timer is initially set to 3 hours.

To change the sleep time:

Press the SLEEP button repeatedly to select the desired sleep time. The time will decrease as follows.

● The amount of sleep time can also be changed whilst in the sleep mode.

3 hours → 2 hours → 1 hour 30 minutes
↑ ↓
OFF ← 15 minutes ← 30 minutes ← 1 hour

3 The unit will enter the stand-by mode automatically after the preset sleep time has elapsed.
(The sound volume will be reduced one minute before the preset sleep time expires.)

To confirm the remaining sleep time:

Press the SLEEP button once.

To cancel the sleep operation:

Press the ON/STAND-BY button to enter the stand-by mode.

■ Simultaneous sleep and timer operation

1 Prepare for timer playback.
(Perform steps 1 - 8 on page 24.)

2 Press the SLEEP button repeatedly to select the desired sleep time.

3 Play the desired item (compact disc, tape, etc.).

4 When the preset sleep time has elapsed, the unit will automatically enter the stand-by mode.

5 When the timer preset time is reached, timer playback will start.

Caution:

● Be sure your tape length is long enough to perform both functions.
If you want to go to sleep and wake up listening to a tape, and the length of the tape is shorter than the sleep timer setting, timer playback will not be possible.

HEADPHONES

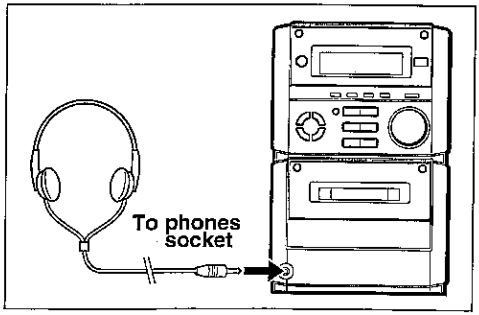

- Before plugging in or unplugging the headphones, make sure the volume level is reduced.
- Be sure your headphones have a 3.5 mm (1/8") diameter plug and are between 16 ohms and 50 ohms impedance. The recommended impedance is 32 ohms.
- When headphones are connected, the speakers are disconnected automatically. Adjust the VOLUME control for desired volume.

RESETTING THE MICROCOMPUTER

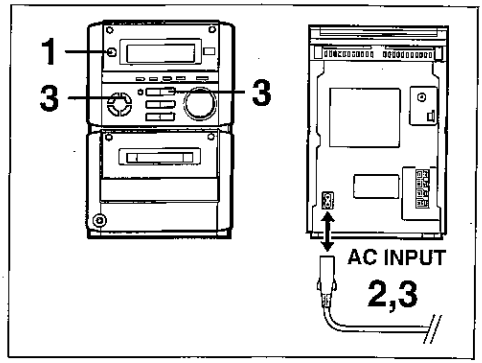

Reset the microcomputer under the following conditions:

- To erase all of the stored memory contents (clock and timer settings, and tuner and CD presets).
- If the display is not correct.
- If the operation is not correct.

1 Press the ON/STAND-BY button to enter the stand-by mode.

2 Unplug the AC power lead from the AC INPUT socket on this unit.

3 Whilst pressing down the MEMORY/SET button and the ► button, plug the AC power lead into the AC INPUT socket on this unit.

Caution:

- The operation explained above will erase all data stored in memory, such as clock and timer settings, and tuner and CD presets.

MAINTENANCE

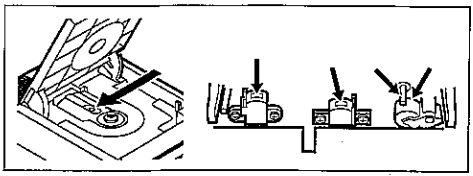

- After long use, the deck's heads and capstan may become magnetised, causing poor sound. Demagnetise these parts once every 30 hours of playing/recording time by using a commercial tape head demagnetiser. Read the demagnetiser's instructions carefully before use.

■ Internal care

- Do not touch the laser pickup lens. If fingerprints or dust accumulate on the pickup, clean it gently with a dry cotton swab.
- Dirty heads, capstan or pinch roller can cause poor sound and tape jams. Clean these parts with a cotton swab moistened with commercial head/pinch roller cleaner or isopropyl alcohol.

■ External care

- Periodically wipe the cabinet with a soft cloth and a diluted soap solution, then wipe with a dry cloth.
- Do not use chemically treated cleaning cloths or other chemicals.

SPECIFICATIONS

As a part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

● **General**

Power source:	AC 230 V, 50 Hz
Power consumption:	26 W
Dimensions:	Width; 160 mm (6-5/16") Height; 241 mm (9-1/2") Depth; 249 mm (9-13/16")
Weight:	2.7 kg (6.0 lbs.)

● **Amplifier section**

Output power:	PMPO; 28 W (total) MPO; 14 W (7 W + 7 W) (DIN 45 324) RMS; 10 W (5 W + 5 W) (DIN 45 324)
Output terminals:	Speakers; 4 ohms Headphones; 16-50 ohms (recommended; 32 ohms)

● **Tuner section**

Frequency range:	FM; 87.5-108 MHz AM; 522-1,620 kHz

● **Compact disc player section**

Type:	Compact disc player
Signal readout:	Non-contact, 3-beam semiconductor laser pickup
D/A converter:	1-bit D/A converter
Filter:	8-times oversampling digital filter
Frequency response:	20 - 20,000 Hz
Wow and flutter:	Unmeasurable (less than 0.001% W. peak)

● **Cassette deck section**

Frequency response:	50 - 14,000 Hz (Normal tape)
Signal/noise ratio:	50 dB
Wow and flutter:	0.3 % (DIN 45 511)

● **Speaker section**

Type:	Full range speaker system
Speakers:	10 cm (4") full-range speaker
Rated input power:	5 W
Maximum input power:	10 W
Impedance:	4 ohms
Dimensions:	Width; 145 mm (5-3/4") Height; 240 mm (9-1/2") Depth; 191 mm (7-1/2")
Weight:	1.3 kg (2.9 lbs.)/each

SHARP

SHARP CORPORATION